



GREYSCALE[®]

FLUTES INSTALLATION GUIDE

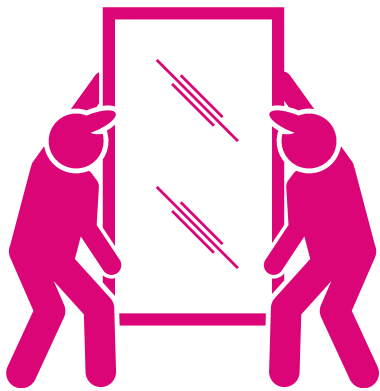

PREINSTALLATION

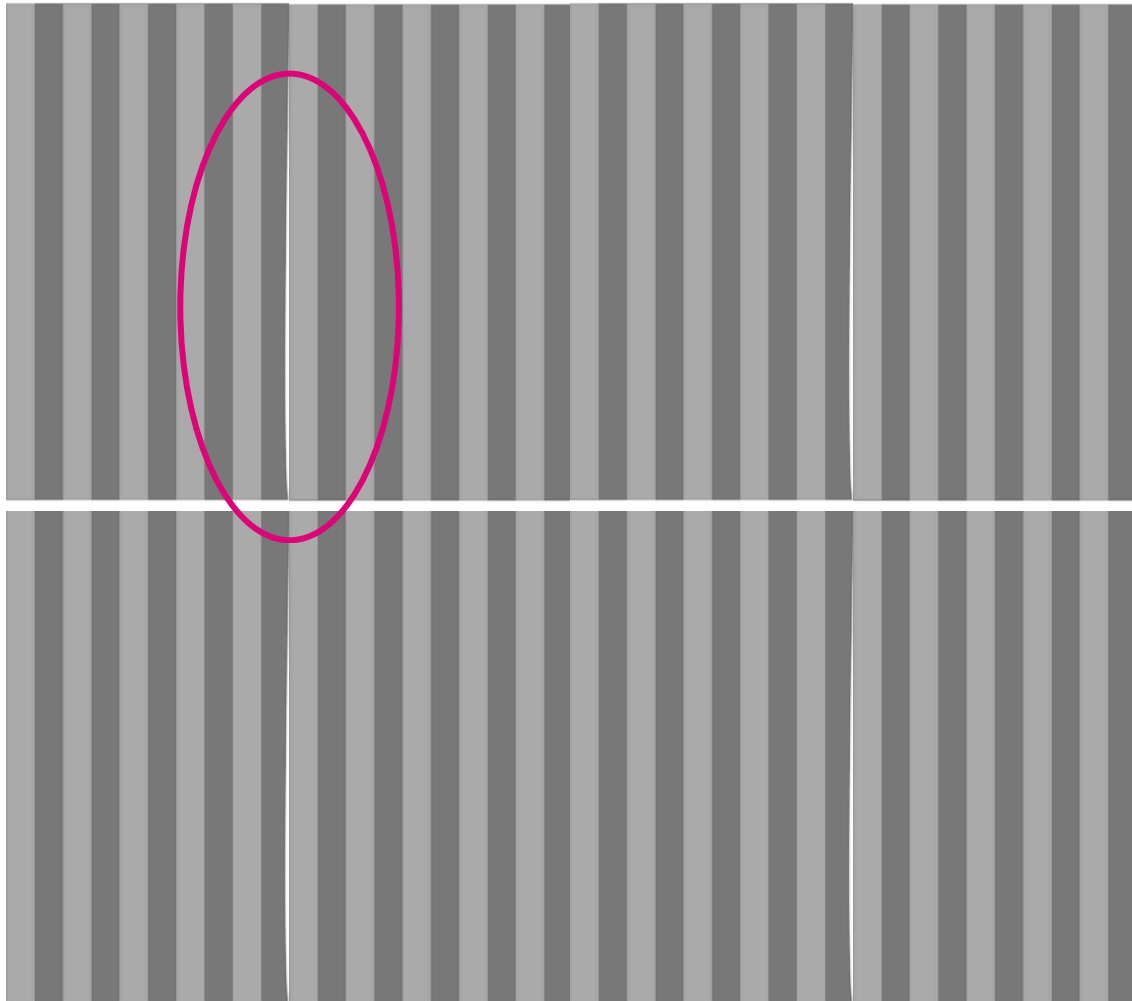

As the fluted panels are made of concrete, minor edge shrinkage may occur. While edges are corrected before dispatch, additional sanding might be required during installation. Hence, panels should not be installed directly on the wall without prior edge adjustment.




PRE-INSTALLATION EDGE ALIGNMENT

Begin by laying out the full panel pattern on the floor to check for any edge misalignments caused by shrinkage. Smoothen uneven edges with a Diamond Polishing Pad (Grit 60 – ‘Batti’) to ensure a precise fit before wall installation.




COLOUR VARIATION

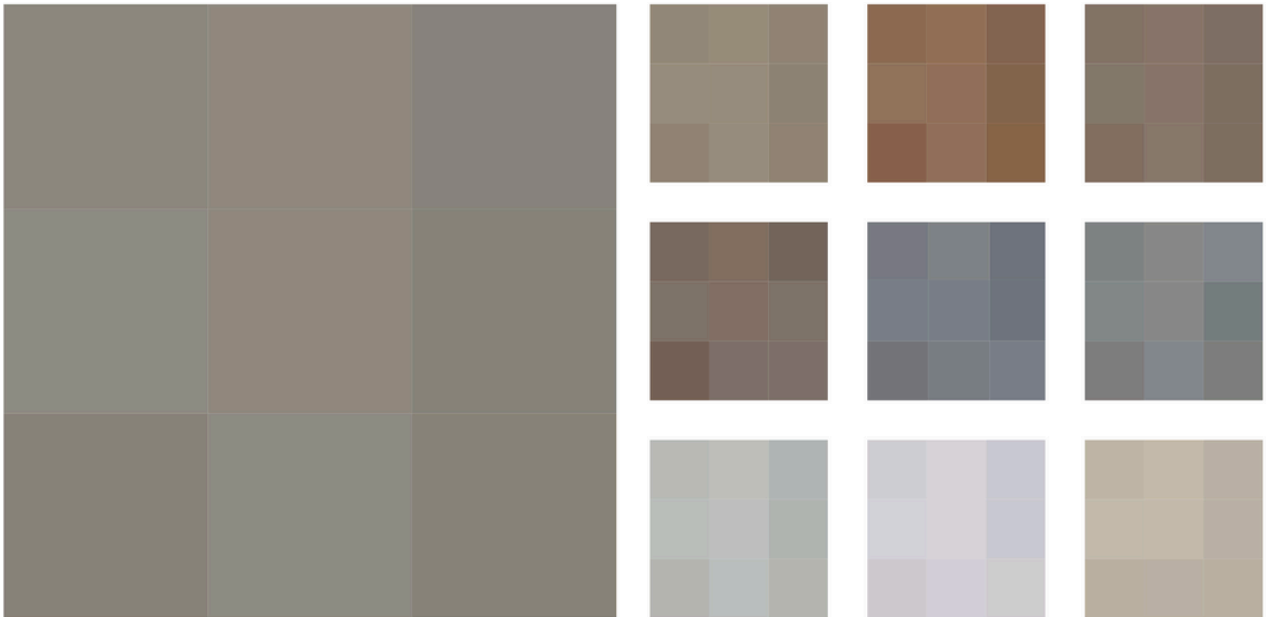

All panels are carefully inspected during manufacturing, and color is reviewed lot by lot to ensure quality. Natural shade variation may occur, and the overall look often depends on how panels are grouped on the wall. To achieve the best visual balance, we recommend that installers adjust panel placement during installation, which usually resolves any concerns and delivers a cohesive finish.



AFTER INSTALLATION

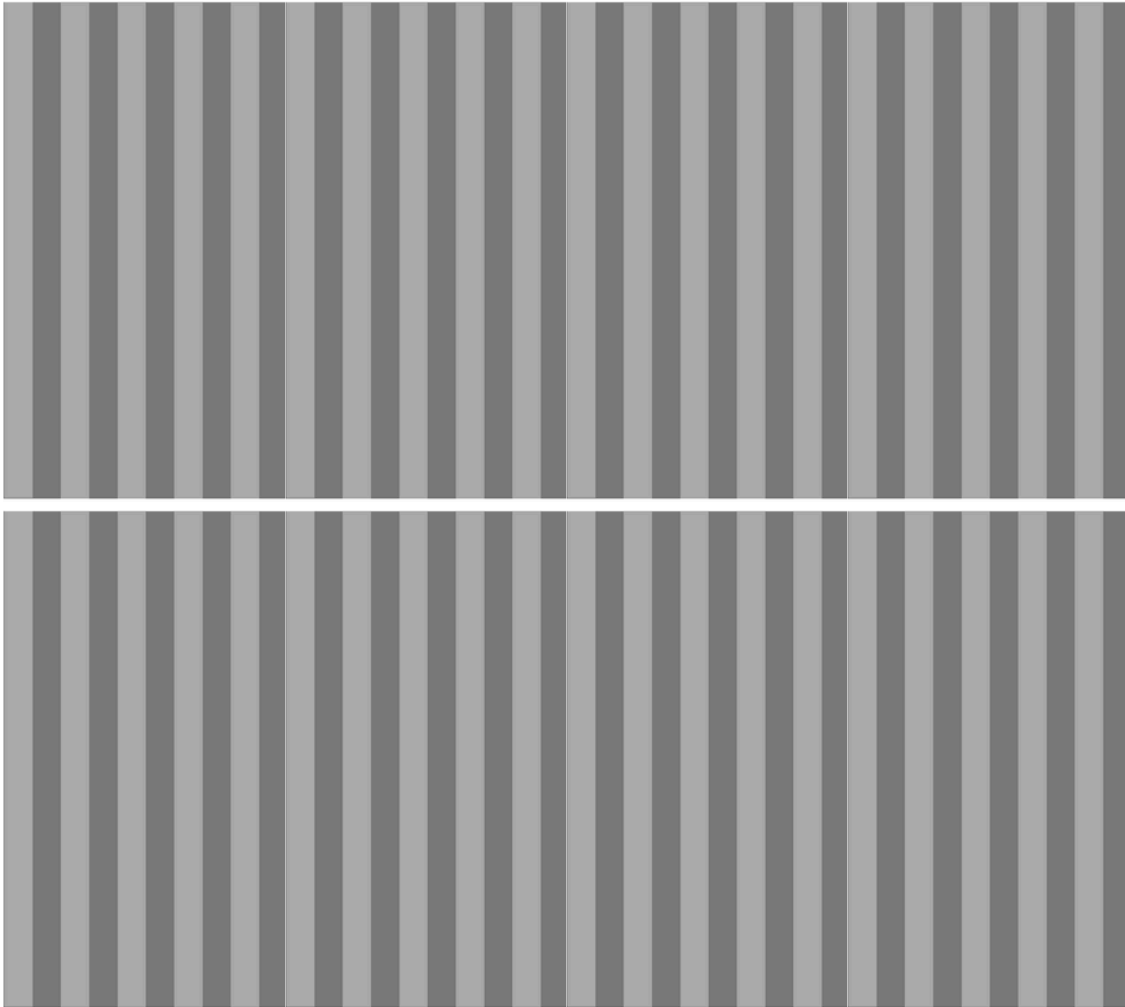

SPACER

Use 5 mm spacers during installation of fluted cladding. Spacers are to be applied vertically (while installing from bottom to top), and not horizontally (left to right).

FINAL OUTCOME



